


RECEIVER

1. On arrival, remove **TIC20-W2** from the shipping container immediately.
2. Press and hold the Stop **O** button until “**STOPPED**” finishes flashing (5 seconds), to stop the **TIC20-W2**.
3. Read the LCD display and follow the instructions as described below.

OK DISPLAY

If **OK**, use vaccines normally.

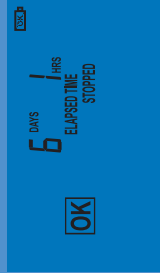

ALARM DISPLAY

An **ALARM** of $\geq 30^{\circ}\text{C}$ has occurred on DAY2, DAY3 and DAY7 of the trip.



If **TIC20-W2** displays an alarm please proceed according to the decision table below:

Alarm temperature	What to do with vaccines:		
	OPV only	Other vaccines	
$\geq 45^{\circ}\text{C}$	Contact procurement agency	Contact procurement agency	Contact procurement agency
$\geq 30^{\circ}\text{C}$	Contact procurement agency	Contact procurement agency	Contact procurement agency
$\geq 10^{\circ}\text{C}$	Contact procurement agency	Contact procurement agency	Accept

Assembled and distributed by LogTag Recorders Ltd
www.logtagrecorders.com

Mount Device here
and this way up

Use only for OPV, freeze-dried BCG, measles, MR, MMR, lyophilized Hib, yellow fever, meningitis (Polysaccharide), Rabies, Rotavirus (Not for RotaTeq®).

SENDER

1. Prepare the shipping container.
2. Lift clear film on front of indicator to retrieve twin bar code label, then stick the label to the shipping document.
3. Activate **TIC20-W2** by pressing and holding the Start **O** button until “**MONITORING**” finishes flashing (5 seconds), with a start delay of 1 hour.
4. Complete the card below in ball point pen.
5. Insert this card, with the activated device attached, into the shipping container.
6. Seal the shipping container.

Supplier name: _____

Date: _____ Time: _____
dd.mm.yyyy hh.mm

Vaccine PO number: _____

Vaccine: _____

RECEIVER: please turn the card!

