


RECEIVER

1. On arrival, remove **TIC20-WR** from the shipping container immediately.
2. Press and hold the Stop **O** button until "**STOPPED**" finishes flashing (5 seconds), to stop the **TIC20-WR**.
3. Read the LCD display and follow the instructions as described below.


OK DISPLAY

If **OK**, use vaccines normally.

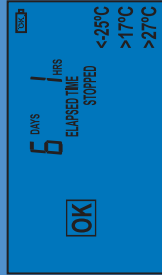

ALARM DISPLAY

An **ALARM** of $\geq 17^\circ\text{C}$ has occurred on DAY2, DAY3 and DAY7 of the trip.

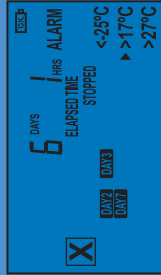

If **TIC20-WR** displays an alarm please proceed according to the decision table below:

Alarm temperature	What to do with vaccines: RotaTeq [®] only
$\geq 27^\circ\text{C}$	Contact procurement agency
$\geq 17^\circ\text{C}$	Contact procurement agency
$\leq -25^\circ\text{C}$	Contact procurement agency

Assembled and distributed by LogTag Recorders Ltd
www.logtagrecorders.com

Mount Device here
and this way up

Use only for RotaTeq[®]

SENDER

1. Prepare the shipping container.
2. Lift clear film on front of indicator to retrieve twin bar code label, then stick the label to the shipping document.
3. Activate **TIC20-WR** by pressing and holding the Start **O** button until "**MONITORING**" finishes flashing (5 seconds), with a start delay of 1 hour.
4. Complete the card below in ball point pen.
5. Insert this card, with the activated device attached, into the shipping container.
6. Seal the shipping container.

Supplier name: _____

Date: _____ Time: _____
dd.mm.yyyy hh.mm

Vaccine PO number: _____

Vaccine: _____

RECEIVER: please turn the card!

