




## Use only for

- DTP, DT,
- DTP-HepB-Hib,
- Hib (liquid),
- HepA, HepB, HPV,
- Influenza seasonal (liquid),
- IPV, JE (liquid),
- Meningococcal ACYW-135 (liquid),
- Rabies, TT, Td,
- OCV,
- PCV (other than Prevnar),
- RV (liquid and other than Bharat liquid)

## SENDER

1. Prepare the shipping container.
2. Lift clear film on front of Indicator to retrieve twin bar code label, then stick the label to the shipping document.
3. Activate the **TIC20-WC** by pressing and holding the **START** button  until "**MONITORING**" finishes flashing (3 seconds), then release the button, with a start delay of 1 hour.
4. Complete the card below in ball point pen.
5. Insert this card, with the activated device attached, into the shipping container.
6. Seal the shipping container.

Supplier name: \_\_\_\_\_

Date: \_\_\_\_\_ Time: \_\_\_\_\_  
dd.mm.yyyy hh:mm


Vaccine PO number: \_\_\_\_\_

Vaccine: \_\_\_\_\_

**RECEIVER: please turn the card!**




# RECEIVER

1. On arrival, remove the **TIC20-WC** from the shipping container immediately.
2. Press and hold the **STOP** button  until "**STOPPED**" finishes flashing (3 seconds), then release the button. The **TIC20-WC** is now stopped.
3. Read the LCD display and follow the instructions as described below.

## OK DISPLAY

Device is stopped.

 shows that no alarms were recorded.

The trip length was 31 days and 15 hours.


**If OK, use vaccines normally.**




## ALARM DISPLAY

Device is stopped.

 shows an **ALARM** was recorded.

In this example, the alarm occurred at a temperature  $\geq 30\text{ }^{\circ}\text{C}$ , indicated by the arrow , on a day in Week 2.

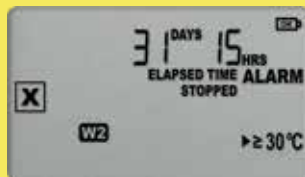

If the **TIC20-WC** displays an alarm, please proceed according to the decision table below:

Alarm temperature	What to do with vaccines:
$\geq 45\text{ }^{\circ}\text{C}$	Contact Procurement Agency
$\geq 30\text{ }^{\circ}\text{C}$	Contact Procurement Agency
$\leq -0.5\text{ }^{\circ}\text{C}$	Conduct Shake Test. Use vaccines if passes. Inform procurement agency of test result.

Assembled and distributed by LogTag North America Inc.  
<https://logtag.com>