


## RECEIVER

1. On arrival, remove **TIC20-W1** from the shipping container immediately.
2. Press and hold the Stop **O** button until "**STOPPED**" finishes flashing (5 seconds), to stop the **TIC20-W1**.
3. Read the LCD display and follow the instructions as described below.


### OK DISPLAY

If **OK**, use vaccines normally.

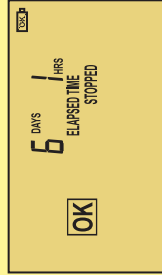

### ALARM DISPLAY

An **ALARM** of  $\geq 30^{\circ}\text{C}$  has occurred on DAY2, DAY3 and DAY7 of the trip.

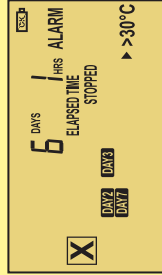

If **TIC20-W1** displays an alarm please proceed according to the decision table below:

Alarm temperature	What to do with vaccines:
$>= 45^{\circ}\text{C}$	Contact procurement agency
$>= 30^{\circ}\text{C}$	Contact procurement agency
$\leq -0.5^{\circ}\text{C}$	Conduct Shake Test. Use vaccines if passes. Inform procurement agency of test result.

Assembled and distributed by LogTag Recorders Ltd  
[www.logtagrecorders.com](http://www.logtagrecorders.com)

Mount Device here  
and this way up

Use only for MTP, DT, TT, Td, Hep B, Hep B, IPV, liquid Hib,  
MenAfrivac, HPV, PCV (Not for Prevenar).

## SENDER

1. Prepare the shipping container.
2. Lift clear film on front of indicator to retrieve twin bar code label, then stick the label to the shipping document.
3. Activate **TIC20-W1** by pressing and holding the Start **O** button until "**MONITORING**" finishes flashing (5 seconds), with a start delay of 1 hour.
4. Complete the card below in ball point pen.
5. Insert this card, with the activated device attached, into the shipping container.
6. Seal the shipping container.

Supplier name: \_\_\_\_\_

Date: \_\_\_\_\_ Time: \_\_\_\_\_  
dd.mm.yyyy hh.mm

Vaccine PO number: \_\_\_\_\_

Vaccine: \_\_\_\_\_

**RECEIVER: please turn the card!**

